



# SENSOR LEDI®

## CAPTEUR IP USER MANUAL



**IMPORTANT SAFETY INSTRUCTIONS**



**WARNING!** The following section provides the safety instructions for installation. Please read it carefully before installing your device.



To protect your device, plug it into a grounded outlet.



The device must be connected to an electrical installation which is in accordance with the NF C15-100 standard.



The wiring installation must include an easily accessible breaking device (circuit breaker or disconnecting switch). This device must withstand the nominal voltage and current values indicated on the device.



In Europe: in accordance with European regulations on the protection of individuals and the environment, it is your responsibility to dispose of this equipment at a collection site designed for this purpose (separately from household waste). For further information, contact your reseller, your collection site or the relevant local authorities.



Any modification or opening of the product without the consent from the Customer service department will void the warranty.



The **SENSOR LEDI®** must only be installed, maintained and handled by competent and knowledgeable persons.



All maintenance operations must be carried out with the power off, including for systems connected to any relay outputs.



As a general rule, to avoid any interferences, the power (230V supply) and signal (time information) cables must not be too close to each other. (keep a few centimetres apart)



To avoid the risk of electrical interference, position the **SENSOR LEDI®** as far as possible from sources of radiation (Loudspeakers, antennas, high-frequency equipment, electromagnetic alarms...).



Gorgy Timing disclaims all liability in the event of accident or damage caused by improper use of **SENSOR LEDI®**.

**All GORGY TIMING products comply with the following standards: CE, EN60950-1, EN55022, EN50024**

## EXPLANATION OF SAFETY SIGNS ON THE PRODUCT



General hazard – there is a risk of damage to the product if instructions are not followed



Electrical hazard – there is a risk of electrocution or personal injury if instructions are not followed.



Equipment fully protected by double insulation.

### Warnings

Please follow the precautions and instructions indicated below in order to ensure the safety of you and your environment, and to prevent any potential damage to your device.



**WARNING:** An isolating switch in compliance with EN60947 standards is used as a disconnecting device. It must be easily accessible and installed close to the power supply. It must disconnect all active poles.



The **SENSOR LEDI®** is intended for indoor use (only for case) and for outdoor use (only for probes), at an altitude of less than 2000 metres.



### Waste disposal by users in private households within the European Union

This symbol on the product or its packaging indicates the product must not be disposed of with your general household waste. Instead, it is your responsibility to dispose of your waste by taking it to a designated collection point for the recycling of electrical and electronic appliances. The separate collection and recycling of your waste contributes to the conservation of natural resources and helps to ensure that recycling is environmentally and health friendly. For more information about your nearest recycling centre, please contact the shop where you purchased your device, the household waste disposal services or your local authorities.

### Technical features

Power supply	Voltage	5V / 250mA
	Connection	Jack Ø3,5 x 1,35 / 10 [mm]
	PoE	RJ45 - IEEE 802.3af
Dimensions	Length	65 mm
	Width	80 mm
	Height	30 mm
Operating condition	Min operating Temperature	-10°C
	Max operating Temperature	+60°C

<b>CONTENTS</b> .....	<b>4</b>
<b>0. QUICKSTART LEDI CLOCK</b> .....	<b>6</b>
<b>1. INTRODUCTION</b> .....	<b>11</b>
1.1. BASIC FEATURES .....	12
1.2. APPLICATION .....	12
1.3. CONNECTORS AND WIRING .....	13
1.4. RECOMMENDED CONNECTION .....	14
2.1. FIRST STEP.....	15
2.1.1. Cable connection .....	15
2.1.2. Setting of the IP address – HWg-Config .....	15
<b>2. FIRST START-UP</b> .....	<b>15</b>
2.1.3. Device website .....	16
<b>3. WWW INTERFACE</b> .....	<b>17</b>
3.1. HOME TAB .....	17
3.2. GENERAL SETUP TAB.....	18
3.3. SECURITY TAB .....	19
3.4. WIFI TAB.....	20
3.5. SENSORS TAB.....	23
3.6. DIGITAL INPUTS TAB.....	24
3.7. E-MAIL TAB .....	25
3.8. SMS tab .....	26
3.9. ALARMS TAB.....	27
3.10. SNMP TAB .....	28
3.11. TIME TAB.....	30
3.12. PORTAL TAB .....	31
3.13. SYSTEM TAB.....	33
<b>4. TECHNICAL INFORMATION</b> .....	<b>35</b>
4.1. TECHNICAL PARAMETERS.....	35
4.2. PHYSICAL DIMENSIONS .....	36
4.3. WIFI RADIO .....	37
4.4. WIFI SIGNAL STRENGTH .....	37
4.5. IMPACT OF DEVICE POSITION VIS-A-VIS THE TRANSMITTER (ROUTER OR AP) ....	38
5.1. DRY CONTACT INPUTS.....	39
<b>5. SUPPORTED INTERFACES</b> .....	<b>39</b>

5.3. ACTIVE / PASSIVE 1-WIRE PORT .....	40
5.4. SENSOR HYSTERESIS .....	40
<b>6. CONNECTION STE2 TO THE SENSDESK PORTAL.....</b>	<b>41</b>
<b>7. USING THE MOBILE PHONE APP.....</b>	<b>41</b>
<b>8. FIRMWARE UPGRADE IN STE2 UNITS .....</b>	<b>41</b>

**STEP 1**

**Caution: wait for step 3 to switch on the product!**




Before installing the product, note the serial number (written on the identification label). It can be useful if you need to contact customer service.



**STEP 2**


Plug the Ethernet cable into the clock connector.

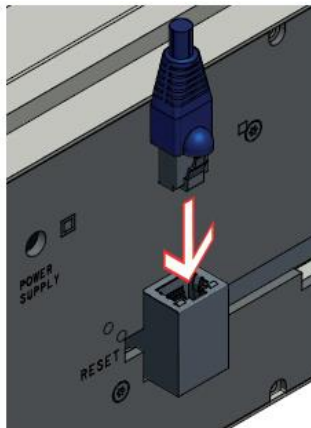

### STEP 3

Check the type of power supply required for the product and connect the power cable (not PoE).


Switch ON the button on the back of the clock.

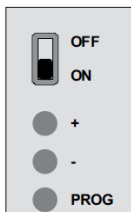

Wait about 30 seconds for the clock to start and display the time.

### STEP 4

Install the GtNetworkManager2 software provided on the DVD or available on our website [www.gorgy-timing.fr](http://www.gorgy-timing.fr). Launch the GtNetworkManager2 software to retrieve the IP address of your Gorgy Timing product.

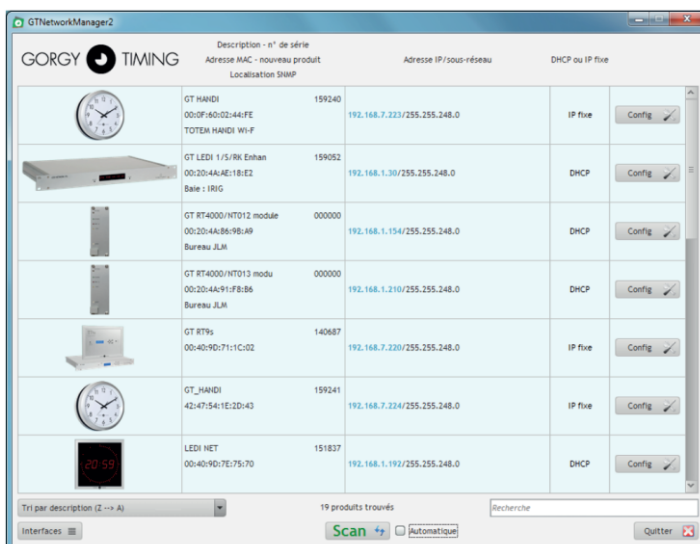

## STEP 5

Allocation of an IP address

Two possible configurations:

1. The network has a DHCP server

In this case, the servers will have automatically allocated a compatible IP address with your existing network.

2. The network does not have a DHCP server

The product then automatically allocates an IP address using the AutoIP mechanism. In this case, the address is: 169.254.x.y.

- Change the IP address of your PC to be in this range: e.g. 169.254.1.1 with a subnet mask of 255.255.0.0.
- Restart a scan with GTNetworkManager2. The product should now appear.
- To change this IP address to fit within the same address range as the network, double click on the relevant product or the corresponding "Config" button in GtNetworkManager2, and then replace the IP address by the one of your choice and validate by clicking on SET!
- The software will ask you for a password. Enter "root" as login and "gtmt" as password.
- To find your product, switch the IP address of your PC in the clock subnet. This will make it detectable again by GTNetworkManager2.

In the event of a problem, please refer to the operating instructions on the DVD or on our website [www.gorgy-timing.fr](http://www.gorgy-timing.fr).

**Important : Do not hesitate to contact your network administrator to configure the product. It can help you to optimise your network installation.**

## STEP 6

For synchronisation and other clock settings, open the WEB page by entering the IP address (of the product) in the address bar of your computer. web browser...

**Congratulations on successfully pre-configuring your product. Please read the user manual for a complete configuration.**



## Sensor Parameters

Open the WEB page by entering the IP address (of the product) in the address bar of your computer.

On Sensor Parameters page, you can configure the SNMP sensor(s) associated with the clock, which can then display one or more temperatures, hygrometry information, etc.

**Warning: This page is only available if the "SENSOR" option was added to the clock when ordering. The Sensors web page allows you to configure up to 3 independent SNMP sensors.**

At the top of the page, you will find the SNMP MIB integrated in the product to more easily retrieve information from the STE2 SNMP sensor as well as a history of the data transmitted by the different sensors.

**Warning: Please refer to the documentation and in particular to the SNMP MIB of the SNMP sensor for configuration and installation.**

The screenshot shows the 'Paramètres Capteurs' configuration page for 'Capteur #1'. The 'OID SNMP' field is highlighted with a red box and contains the value '.1.3.6.1.4.1.21796.4.9.3.1.5.1'. A red arrow points from a warning icon to this field. The warning text reads: 'Do not forget the point at the beginning.'

### SNMP Parameters

Utilisateur :	<input type="text" value="User"/>	
<small>Laisser vide pour désactiver la version 3</small>		
MDS authentication password :	<input type="password" value="....."/>	
<small>Laisser vide pour désactiver l'authentification et la confidentialité</small>	<small>AES privacy password: <input type="password" value="....."/></small>	
<small>Laisser vide pour désactiver la confidentialité</small>		
<b>Génération de traps</b>		
Mode	Adresse (IPv4/IPv6)	Port
SNMPv2c	192.168.10.44	162

Among the parameters that must be entered to configure an SNMP sensor are the following:

- **The name of the sensor:** which makes it easier to identify the sensor and its data
- **The sensor unit:** so that the display can show the correct unit with the data.
- **The SNMP OID:** indicates the SNMP OID (register index) where to find the value to be retrieved.

It can be a sequence of numbers separated by dots, but in the case of STE2, whose MIB is integrated in the LEDI, the string can be used directly:

STE2::SensorValue.x where x is the number of the sensor on the STE2.

- **The version of the SNMP** protocol that you wish to use: there are 3 versions (v1, v2c and v3) whose parameters can be configured in the SNMP Settings Web Page. (SNMPv1/2c community, SNMPv3 username/password. You can also choose to disable the use of a sensor.
- **The IP address and SNMP** port of the SNMP sensor. A host name for the sensor can be used if it is entered in the DNS. The default SNMP port is UDP port 161.
- **Sensor data conversion ratio:** default 1. The system is programmed to receive the data on an integer which is 10 times the actual value (to get the tenth).  
The STE2 works on this principle, so there is no need to change the value, but in the case of another sensor not following this rule, the input data can be adapted by dividing it by this value.
- **Sensor Value:** To check the correct sensor configuration, the most recent value ascended by the SNMP sensor and formatted for display will be shown (with its unity). If the sensor does not respond or is disabled, the sensor value will be set to "--".

STE2 is a thermometer with an Ethernet and WiFi interface, HTTPS support and option of connection to the SensDesk portal.

STE2 is a device with HTTPS and SNMP support designated for measuring temperature and humidity from external sensors, with the option of connection to the internet via classic cable or WiFi. If the permitted range of values is exceeded, it allows the sending of an alarm via e-mail, via the SensDesk portal or via SMS. Support of monitoring system is a matter of course and the device is supplied with free HWg-PDMS software to create graphs and export data to MS Excel. The packaging includes a power adapter.



## 1.1. BASIC FEATURES

- Contains classic Ethernet and WiFi – 802.11 b/g/n (2.4 GHz)
- Support of current Ethernet and WiFi operation (for easy configuration)
- 5V or PoE power supply
- Simple installation, supports DHCP
- Built-in WEB server with HTTPS support – no need for any software other than a standard internet browser
- Can be connected to NMS (SNMP MIB)
- Support for simultaneous traffic to both HTTP and HTTPS with the option of disabling one or the other protocol for security reasons
- Sends an e-mail if the temperature is too high / low
- Support of TLS authorisation (GMAIL)
- Password protected
- Supplied with Windows HWg-PDMS software for drawing graphs and exporting data to MS Excel

## 1.2. APPLICATION

### A/C outages

Changes in temperature alert you to outages of the A/C cooling unit.

### Heating monitoring

Remote monitoring of the heating system, alert via e-mail or SMS about the risk of freezing (e-mail-2-SMS).

### Monitoring of provided services

Using the provided HWg-PDMS software, you can easily create reports with temperature graphs at one or several locations. You can have an overview of the quality of outsourced services.

### Fridge and freezer monitoring


Sends an e-mail to alert you of refrigerator outages. Logging of operation and storage conditions.

### Heating optimisation


Cost savings for heating and A/C.

### Food storage

Monitors optimal storage conditions. Protocols for HACCP can be created using the application software.

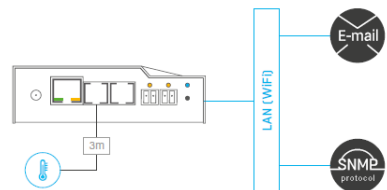

## 1.3. CONNECTORS AND WIRING

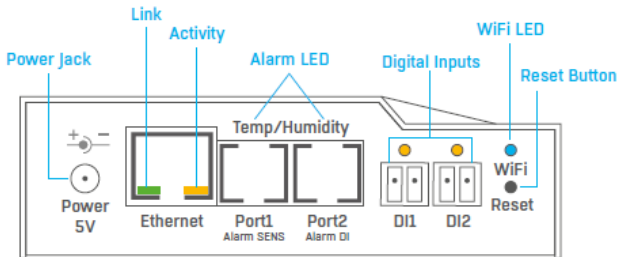

### Description of connectors

- **Ethernet** – Serves for internet connection via cable for operation in a classic computer network and for configuration of operation on WiFi. The connector supports power supply from the computer network via PoE.
- **Temp/Humidity** – Serves to connect up to 3 temperature or humidity sensors. The sensor length may be up to 60 metres in each port.
- **Power** – Connector for 5V power supply in the case of power supply from an external adapter.
- **Digital Inputs** – Serves to connect sensors with digital output.


### LED diodes on the front panel

- **Link** – A green LED signals connectivity to the computer network.
- **Activity** – A yellow flashing LED signals ongoing communication on the cable connection to the computer network.
- **WiFi** – A blue LED signals establishment of a connection to the WiFi connection point. When establishing a connection, it signals the state by flashing.
- **Alarm LED** – Two LEDs hidden in the Port1 and Port2 connectors. Shining LEDs indicate Alarm state.
- **Alarm SENS** – Shining LEDs signalises Alarm state on one of the temperature or humidity sensors.
- **Alarm DI** – Shining signalises Alarm state on one of the digital inputs.


### Description of button function

- **Reset** – serves to restore factory settings on the device.
  1. Switch the device off.
  2. Press and hold the button.
  3. Switch the device on and press the button for another 5 seconds.
  4. All the LEDs will gradually light up.
  5. Restart the device. Factory settings will be restored.


## 1.4. RECOMMENDED CONNECTION

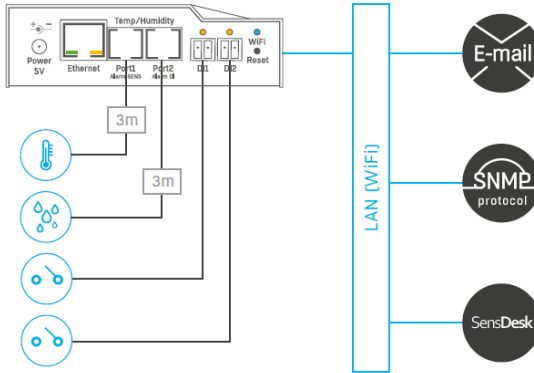

### Sensor connection options:

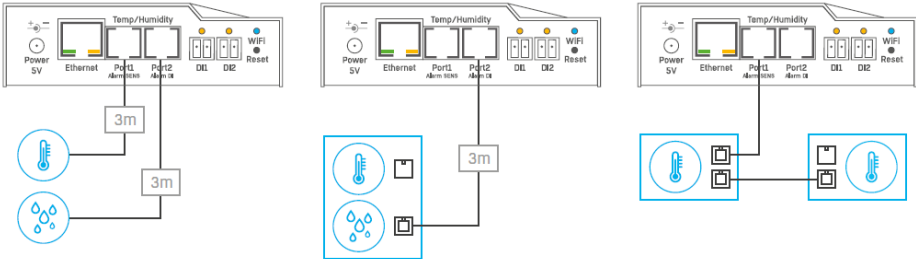

### Smoke sensor connection:

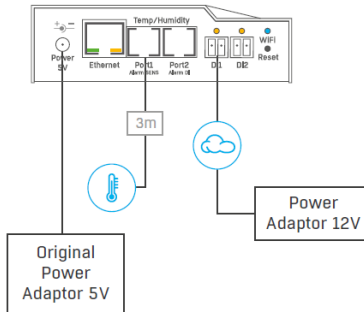

## 2.1. FIRST STEP

### 2.1.1. Cable connection


- Connect the device to the **Ethernet** (direct cable to the **switch**, crossed to PC).
- Connect the power adapter to the grid and connect it to the device power supply connector.
- The green LED in the **Power & Mode** RJ45 connector will light up.
- If connection to the **Ethernet**, is functional, the **LINK** (yellow) LED should light up shortly afterwards and switch off during data transfer to the Ethernet (Activity signalisation).
- A quickly flashing yellow **LINK** LED signalises communication with the DHCP server.

### 2.1.2. Setting of the IP address – HWg-Config

The **HWg-Config** program is located in the main director on the enclosed CD (version for Windows and Linux).

The program can be downloaded at [www.HW-group.com](http://www.HW-group.com) Software -> HWg-Config.

- Click on the icon to launch the **HWg-Config** program – the program automatically searches for connected devices.
- Launch the search by clicking on the **Find Devices** icon.
- The program searches for devices in your local network. Click on the MAC address of the device to open the dialogue window for device settings.

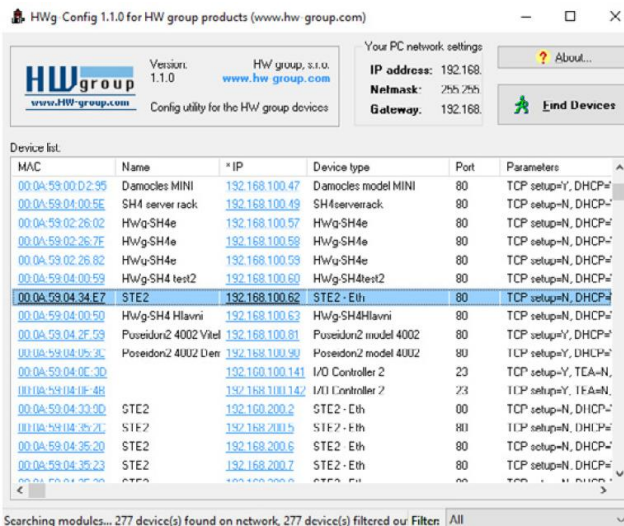

**Set device network parameters:**

- IP address / HTTP port (80 by standard)
- Your network ask
- IP address of your network gateway
- Device name (optional parameter)

Save the settings by clicking on **Apply Changes**.

**Restore default settings:**

- Right-click on the device MAC address. The default values from the HWg-Config can be restored by software mode during the first 60 settings after start-up.


- Press the RESET button, hold it down and connect the power source. Hold the button down for another 5 seconds until all the LEDs light up.



**2.1.3. Device website**

**Options of opening the website:**

- Enter the device IP address in the browser window.
- Click on the IP address in the HWg-Config program.
- Click on the underlined IP address in the HWg-Config application.

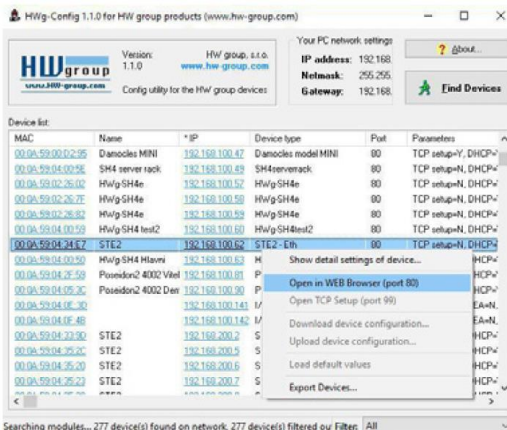



## 3.1. HOME TAB

state	name	type	current value
Normal	Sensor 2553	Humidity	41.8 %RH
Normal	Sensor 3553	Temp.	27.0 °C
Invalid	Sensor 6291	Temp.	999.9 °C
Invalid	Sensor 6292	Humidity	999.9 %RH
Normal	Input 1	Input Dry Contact	0 (Open)
Alarm	Input 2	Input Dry Contact	1 (Closed)

**Base Information section**


- **Device Name** – The device name serves to distinguish specific devices in larger installations. Can be set in the General Setup tab.
- **Time** – Current device time. The time can be set automatically from the internet or manually in the Time tab. In the case of automatic setting, the correct value is the indicator of device access to the internet.
- **Date** – Current device date. The date can be set automatically from the internet or manually in the Time tab. In the case of automatic setting, the correct value is the indicator of device access to the internet.

**Sensors & Digital Inputs section**

Lists the current values of sensors and digital DI inputs (Dry contacts)

- **State** – Input or sensor state.
- **Normal** – Idle state, all normal.
- **Alarm High** – Value exceeded the permitted upper limit.
- **Alarm Low** – Value dropped below lower bottom limit.
- **Alarm** – Digital input in the Alarm state (according to the Alarm Alert setting at the Digital Inputs tab).
- **Name** – Sensor name for better identification in larger systems. The name can be set in the Sensors or Digital Input tab.
- **Type** – Sensor type; indicates what type of sensor is in question (temperature / humidity / digital input).
- **Current Value** – Current value including unit of measure.

### 3.2. GENERAL SETUP TAB

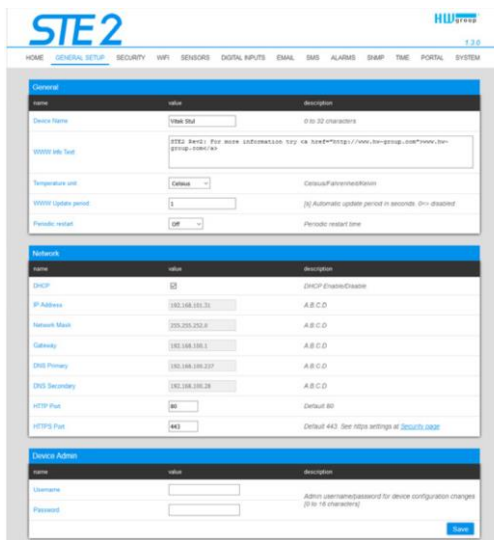

#### General section

- **Device Name** – Device name (STE2), allow you to distinguish individual the device in the network.
- **WWW Info Text** – Text at the foot of the website.
- **Temperature Unit** – Unit for displaying temperature. You can choose between Celsius / Fahrenheit / Kelvin. The Safe Range values will automatically be converted based on this option.
- **Periodic Restart** – Function to improve device stability in exposed networks allowing regular automatic restart of the device.

#### Network section

Only the cable connection parameters (RJ-45) are set here. Wireless connection parameters are set in the WiFi tab.

- **DHCP** – Permits the function of IP address setting by the DHCP server, if available. Enabling or disabling DHCP depends on the needs of the user and network administrator.
- **IP Address** – IP address of the device, allocated by the network administrator.
- **Network Mask** – Network mask, allocated by the network administrator.
- **Gateway** – IP address of the default gateway, allocated by the network administrator.
- **DNS Primary / DNS Secondary** – IP address of the DNS server, allocated by the network administrator.

- **HTTP Port** – Port number on which the built-in WWW server tunes in. A change of the port number is suitable e.g. for multiple devices accessible from the external network via a router. Consult the network administrator about potential changes. The default port is 80. You can turn off HTTP support by setting the port value to 0.
- **HTTPS Port** – The port number on which the embedded Web server listens for the secure HTTPS connection. Changing the port number is appropriate, for example, for multiple devices accesses from the external network via the router. Contact your network administrator for any change. The default port is 443. You can turn off HTTPS support by setting the port value to 0.

## Device Admin section

- **Username / Password** – Username and password to secure access to the device.

## 3.3. SECURITY TAB

The screenshot shows the 'HTTPS Server Certificate files' management page in the STE2 interface. It features a navigation bar with 'SECURITY' highlighted and a sub-menu with 'WIFI', 'SENSORS', 'DIGITAL INPUTS', 'EMAIL', 'SMS', 'ALARMS', 'SNMP', 'TIME', 'PORTAL', and 'SYSTEM'. The main content area is titled 'HTTPS Server Certificate files' and contains three rows for managing certificates:

- Row 1:** type: ssl:certificate. Description: Public key certificate file, ext. \*.cer. Filename: cert.cer. Input file: Browse... (no file selected). Edit File: Delete File.
- Row 2:** type: ssl:certificatekeyfile. Description: Secret key file, ext. \*.key. Filename: key.pem. Input file: Browse... (no file selected). Edit File: Delete File.
- Row 3:** type: ssl:certificateauthority. Description: CA certificate file, ext. \*.pem. Filename: \*.pem. Input file: Browse... (no file selected). Edit File: Delete File.

At the bottom, there is a 'Generate' button and a warning message: 'Generate a private SSL key and selfsigned certificate for closed networks or testing purposes. The generated certificate is selfsigned and will be displayed as untrusted. Please add the certificate to the list of exceptions or use a certificate signed by a trusted certification authority. Please note that the generated data will replace the SSL:CertificateAuthorityFile. Generating the key can take up to 10minutes. Do not restart the device and do not search for sensors. Otherwise the key generation will be interrupted.' Below the message is a 'Generate the SSL key and certificate' button.

### HTTPS Server Certificate files

Used to manage certificates needed for the HTTPS server. Allows you to upload or delete a public key, a private key, or a certificate of the certificate authority (CA) that has issued the public key certificate.


### Generate the SSL key and certificate

Generate a private SSL key and self-signed certificate for closed networks or testing purposes. The generated certificate is self-signed and will be displayed as untrusted. Please


add the certificate to the list of exceptions or use a certificate signed by a trusted certification authority. Please note that the generated data will replace the SSLCertificateFile and the SSLCertificateKeyFile. Generating the key can take up to 10 minutes. Do not restart the device and do not search for sensors. Otherwise the key generation will be interrupted.

### 3.4. WIFI TAB

When WiFi is off, only the enable option is shown:

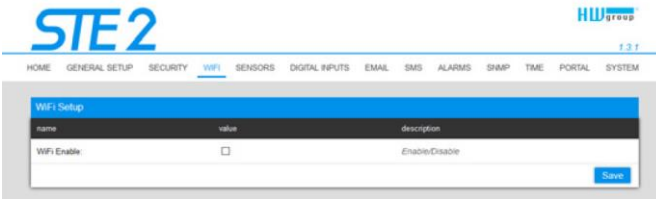

All the options are available after enabling:

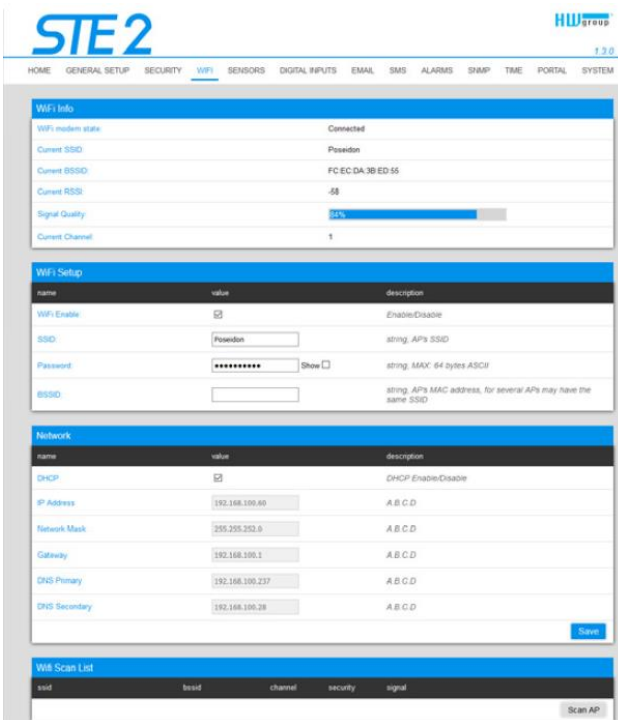

### WiFi modem state

- **Disable** – Wifi is disabled.
- **Wait for power on** – Waits for WiFi module when power on.
- **Init** – Initializing of WiFi module.
- **Connecting** – Connecting.
- **SSID check** – SSID check.
- **Connected** – Connected to selected WiFi network.
- **Network WiFi scan** – Scan of available WiFi networks.
- **Wait for scan** – Waits for Network wifi scan.

### Information section

- **Current SSID** – Current name of the network to which the device is connected. If the parameter is missing, the device is not connected to any WiFi network.
- **Current BSSID** – Current identifier of the WiFi network connection point. If the parameter is missing, the device is not connected to any WiFi network.
- **Current RSSI** – Relative strength of signal input. The higher the RSSI, the stronger the signal.
- **Signal Quality** – Strength of WiFi signal in % with graphic indicator.
- **Current Channel** – WiFi channel on which the device communicates. If the parameter is missing, the device is not connected to any WiFi network.

### WiFi Setup section

- **WiFi Enable** – Enable or disable WiFi. By standard, the wireless interface is disabled. Device restart follows enabling.
- **SSID** – Name of the WiFi network to which should be the device connected. If you do not know your network name, use the Scan AP function at the bottom of the page.
- **Password** – Secured network password. If you do not know it, contact your network administrator.
- **BSSID** – Identifier of the WiFi network connection point (MAC address of the connection point). Optional data.

### Network section

WiFi network parameters. Only the wireless interface is set here. Cable Ethernet (RJ-45) is set in the General Setup tab.

- **DHCP** – Permits the function of IP address setting by the DHCP server, if available. Enabling or disabling DHCP depends on the needs of the user and network administrator.
- **IP Address** – IP address of the device, allocated by the network administrator.
- **Network Mask** – Network mask, allocated by the network administrator.
- **Gateway** – IP address of default gateway, allocated by the network administrator.

- **DNS Primary / DNS Secondary** – IP address of the DNS server, allocated by the network administrator.


### WiFi Scan List

- **SSID** – Name of found WiFi network.
- **BSSID** – Connection point identifier (MAC address).
- **Channel** – WiFi channel on which the connection point operates.
- **Security** – Type of secured WiFi communication.
- **Signal** – Signal level in DB. The higher the value, the better. WARNING, -60 is more than -90! The highlighted row indicates the currently connected AP.

### Connecting to found WiFi

- Click on the SSID of the found network to prefill WiFi setting and just enter the Password. The BSSID remains empty. Standard setting. Reconnects automatically if AP is changed.
- Clicking on BSSID will prefill not only the network name (SSID), but also the MAC address of the specific AP (BSSID). The device then connects to this AP and will not try to reconnect in the case of aggregated networks.

### Scan AP

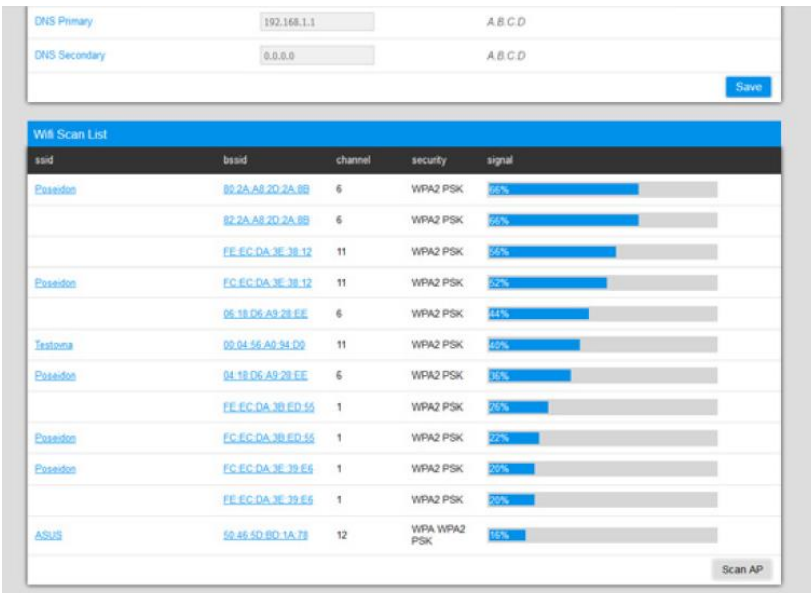


The screenshot shows a network configuration screen. At the top, there are two input fields for DNS: 'DNS Primary' with the value '192.168.1.1' and 'DNS Secondary' with the value '0.0.0.0'. Both fields have 'A B C D' dropdown menus. A 'Save' button is located to the right of these fields.

Below the DNS settings is a section titled 'WiFi Scan List' with a blue header. It contains a table with the following columns: 'ssid', 'bssid', 'channel', 'security', and 'signal'. The 'signal' column uses a blue progress bar to represent the signal strength. The first row is highlighted in blue, indicating it is the currently connected AP.

ssid	bssid	channel	security	signal
Posidon	B2:2A:A8:2D:2A:8B	6	WPA2 PSK	55%
Posidon	B2:2A:A8:2D:2A:8B	6	WPA2 PSK	55%
	FE:EC:DA:3E:39:12	11	WPA2 PSK	55%
Posidon	FC:EC:DA:3E:39:12	11	WPA2 PSK	52%
	06:18:D6:A9:29:EE	6	WPA2 PSK	44%
Testoma	09:04:56:A0:94:D9	11	WPA2 PSK	43%
Posidon	04:18:D6:A9:29:EE	6	WPA2 PSK	36%
	FE:EC:DA:3E:ED:56	1	WPA2 PSK	26%
Posidon	EC:EC:DA:38:ED:56	1	WPA2 PSK	23%
Posidon	EC:EC:DA:3E:39:EE	1	WPA2 PSK	20%
	FE:EC:DA:3E:39:EE	1	WPA2 PSK	20%
ASUS	50:45:5D:8D:1A:79	12	WPA WPA2 PSK	16%

A 'Scan AP' button is located at the bottom right of the scan list table.


### 3.5. SENSORS TAB

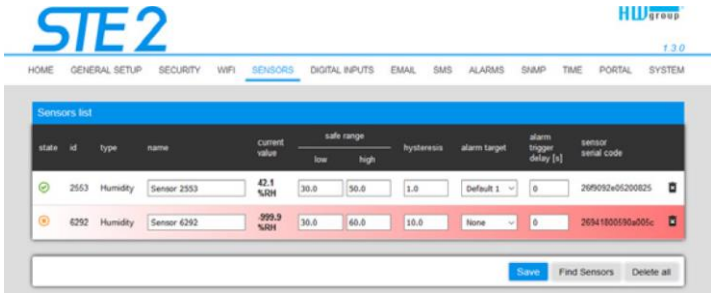


#### Sensor List section \*

- **State** – Input or sensor state.
  - **Normal** – Idle state, all normal.
  - **Alarm High** – Value has exceeded permitted upper limit.
  - **Alarm Low** – Value has dropped below permitted lower limit.
- **ID** – Sensor ID identical to ID in Poseidon2 and STE2 units.
- **Type** – Sensor type; determine what type of sensor is in question (temperature / humidity / DI input).
- **Name** – Sensor name for better identification in larger systems. The name can be set in the Sensors or Digital Input tab.
- **Current Value** – Current value including unit of measure.
- **Safe Range** – Range of permitted values. If the current value exceeds the Safe Range, an Alarm is activated.
- **Hysteresis** – Defines the insensitivity zone if the limit values are exceeded; prevents the activation of multiple alarms if the temperature oscillates around the limit value.
- **Alarm Target** – Specifies the targets for alarm alerts (SMS + E-mail). Target recipients are defined at the Alarms tab. The drop-down menu allows selecting an existing set of targets or creating a new one.
- **Alarm Trigger Delay [s]** – Delays the alarm start alert by a specified time.
- **Code** – Full ID of the 1-Wire sensor.
- **Delete** – Button to delete the specific sensor.

\*Sensors in Alarm state are highlighted

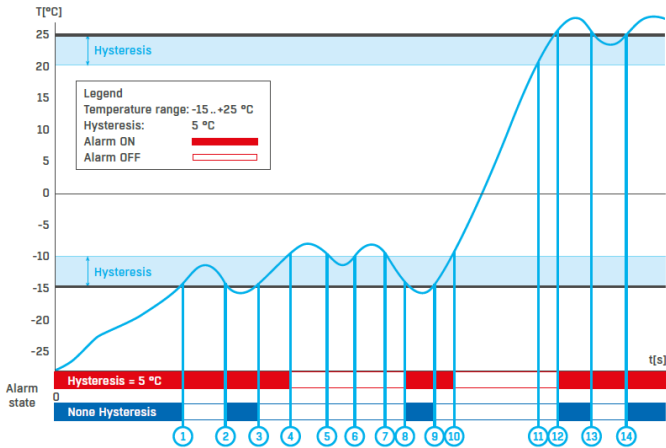

### 3.6. DIGITAL INPUTS TAB

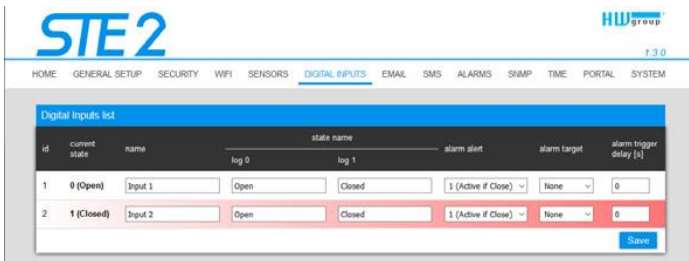

#### Sensor List section\*

- **ID** – Indication of the input variable within the device.
- **Current State** – List of current input state (“0 (Off)” / “1 (On)”).
- **Name** – Input name in 12 characters (e.g. “2F left door”, “smoke section 1”).
- **Alarm Alert** – Definition of Alarm state for each input.
- **Alarm Target** – Specifies the targets for alarm alerts (SMS + E-mail). Target recipients are defined at the Alarms tab. The drop-down menu allows selecting an existing set of targets or creating a new one.
- **Active if Close** – Alarm active if the input is in state 1 (On).
- **Active if Open** – Alarm active in input is in state 0 (Off).
- **Disabled** – Input does not have a defined Alarm state.
- **Alarm Trigger Delay [s]** – Delays the alarm start alert by a specified time.

\* DI inputs in Alarm state are highlighted.



## 3.7. E-MAIL TAB

The screenshot shows the STE2 web interface. At the top, there is a navigation menu with options: HOME, GENERAL SETUP, SECURITY, WFI, SENSORS, DIGITAL INPUTS, **E-MAIL**, SMS, ALARMS, SNMP, TIME, PORTAL, SYSTEM. The version number 'f.3.0' is displayed in the top right corner.

The main content area is divided into two sections:

**Email Settings**

name	value	description
SMTP Server	mail.hu.cz	IP Address or DNS Name
SMTP Port	25	Default 25
Authentication	<input type="checkbox"/>	Enable/Disable
Secure TLS mode	<input type="checkbox"/>	Enable/Disable
Use HTML formatting	<input checked="" type="checkbox"/>	Uses html to format email message body
Username	smtp	0 to 32 characters
Password	*****	0 to 32 characters
Importance	Normal	Email importance flag
FROM	ste2@hu.cz	Device email address
Subject	STE2 via mobile	Beginning of email subject

A "Save" button is located at the bottom right of the Email Settings section.

**Email Test Log**

Email address: recipient@domain.com (Email for testing)

Debug log window

A "Test Email" button is located at the bottom right of the Email Test Log section.

### E-mail Settings


- **SMTP Server** – IP address or domain address of the SMTP server.
- **SMTP Port** – Port number on which the e-mail server tunes in – 25 by standard.
- **Authentication** – Enable authentication; check if the SMTP server requires authentication.
- **Secure TLS mode** – Check if the SMTP server requires secure communication via SSL/TLS.
- **Username** – Username for SMTP server authentication. If the Authentication field is not checked, the content of this field is irrelevant.
- **Password** – Password for SMTP server authentication. If the Authentication field is not checked, the content of this field is irrelevant.
- **Importance** – Sets priority of the e-mail message. Important for filtering and further processing of alarm messages.
- **FROM** – Sender's e-mail address, i.e. of the device. The address may be required by the SMTP servers and can be used to identify the device or to filter and further process alarm messages.
- **Subject of e-mail** – The field content can be used to identify the device, or for filtering and further processing of alarm messages.

### Email Test Log section

In this section, the SMTP server settings can be tested. Click Test Email to send a test e-mail to the specified Email address. The Debug log window shows the communication with the SMTP server.

### 3.8. SMS tab

With the Wifi turned off, only the power-on option is shown:

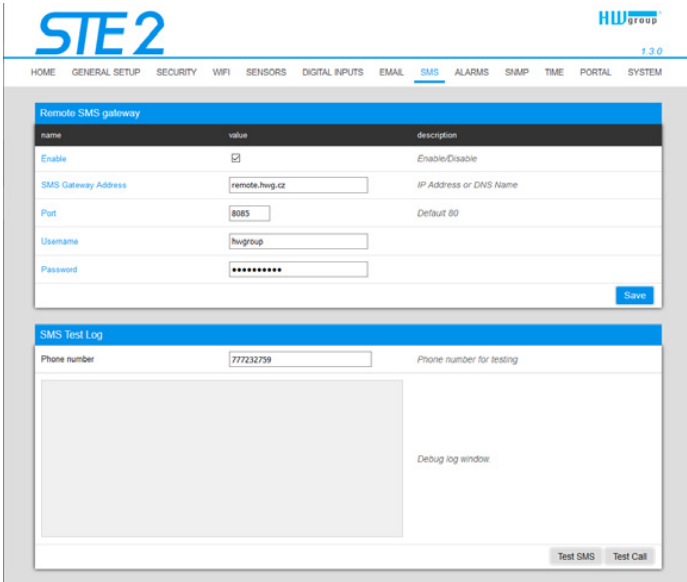

#### Remote SMS gateway

- **Enable** – Turns on the SMS sending function. For sending, the SMS alarm action must be set at the sensor or input.
- **SMS Gateway Address** – IP address where “HWg-SMS-GW3” is located through which the device will send SMS. It can be set including service - typically /service.xml
- **Port** – The TCP port on which the gateway listens.
- **Username** – User name for authorization in SMS GW.
- **Password** – Password for authorization in SMS GW.
- **SMS + Ring When Alarm** – Enables sending a SMS and then dialing the number.

#### SMS Test Log

In this section, the SMS gateway settings can be tested.

- **Test SMS** – Sends a test text message to the specified Phone number.
- **Test Call** – Dials the specified Phone number.
- **Debug log window** – Shows the communication with the SMS gateway.

### 3.9. ALARMS TAB

Alarm targets are defined at this tab. Up to 2 sets of targets can be created; each set can contain up to 2 addresses for e-mail alerts and 2 phone numbers for text message alerts and calls. These sets are then assigned to individual sensors and digital inputs. To create a set, click the + button at the Alarms tab, or select Add new... when editing a sensor or a digital input.


#### Alarm Target

Set of targets. For clarity, the set can be given a custom name.

- **Email list** – E-mail addresses of alarm alert recipients. To send e-mails, the SMTP server must be properly configured at the Email tab.
- **Email address** – Each field may contain only one e-mail address.
- **SMS list** – Phone numbers for text message alarm alerts. To send a message, the SMS gateway must be properly configured at the SMS tab.
- **Phone number** – Each field may contain only one phone number.
- **Call** – When checked, the phone number is dialed after the text message is sent (an incoming text alone can be easy to overlook).

### 3.10. SNMP TAB

The SNMP tab sets the parameters for communication via SNMP protocol.

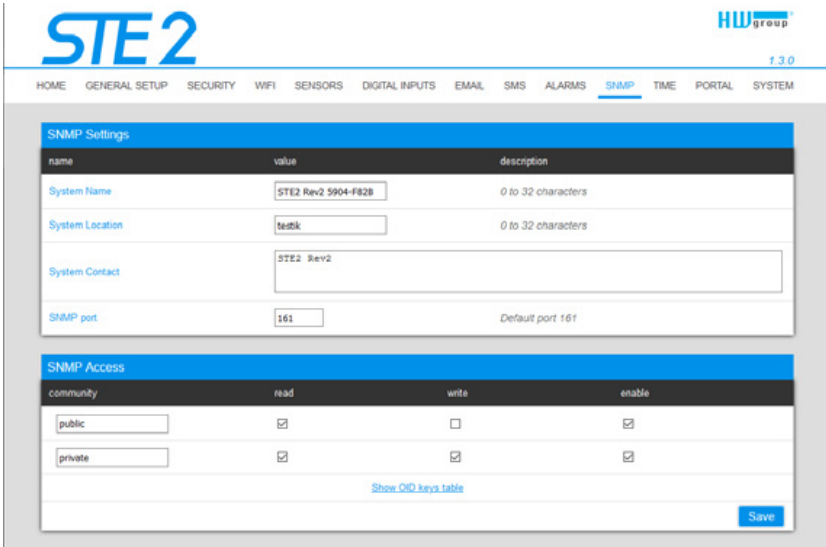

#### General SNMP Settings section


- **System Name** – Device name within SNMP.
- **System Location** – Device location within SNMP.
- **System Contact** – Contact of the device administrator within SNMP.
- **SNMP port** – Port number on which communication via SNMP is possible – 161 by standard.

#### SNMP Access section

- **Community** – Name of SNMP community for access to the device via SNMP. 2 communities can be defined. For each Community you can define whether it has rights for:
  - **Read**
  - **Write**

## Show OID keys table


This function writes up the entire tree of variables with indication of the entire SNMP OID and explanations of the type of variable. For connecting the device to third-party monitoring systems, there is also an MIC file under the Download MIB file link.

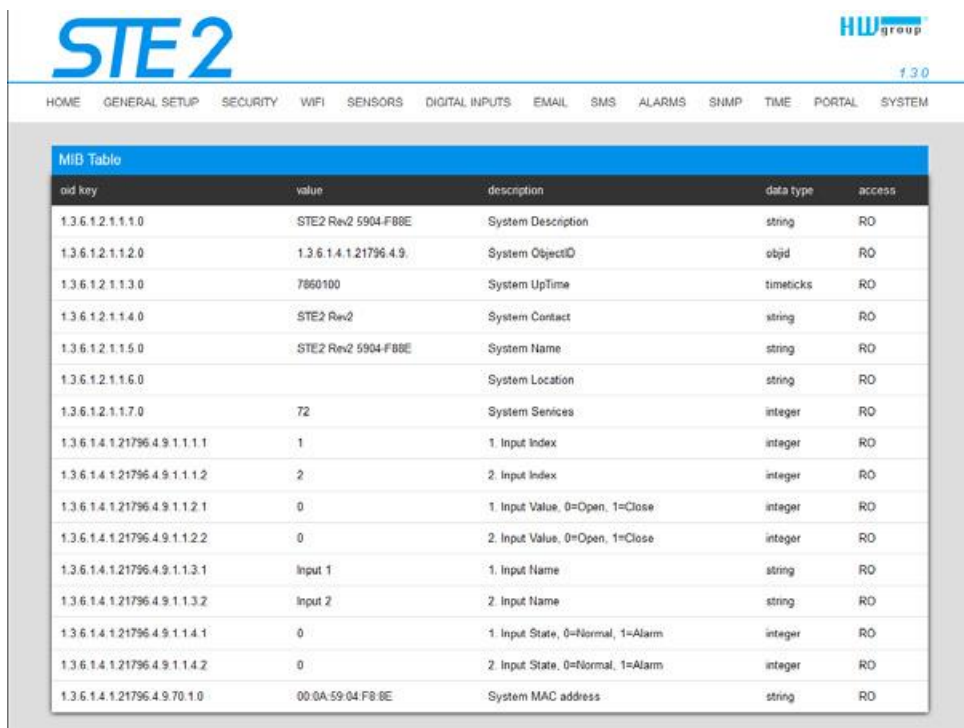

oid key	value	description	data type	access
1.3.6.1.2.1.1.1.0	STE2 Rev2 5904-FBBE	System Description	string	RO
1.3.6.1.2.1.1.2.0	1.3.6.1.4.1.21796.4.9	System ObjectID	objid	RO
1.3.6.1.2.1.1.3.0	7860100	System UpTime	timeticks	RO
1.3.6.1.2.1.1.4.0	STE2 Rev2	System Contact	string	RO
1.3.6.1.2.1.1.5.0	STE2 Rev2 5904-FBBE	System Name	string	RO
1.3.6.1.2.1.1.6.0		System Location	string	RO
1.3.6.1.2.1.1.7.0	72	System Services	integer	RO
1.3.6.1.4.1.21796.4.9.1.1.1.1	1	1. Input Index	integer	RO
1.3.6.1.4.1.21796.4.9.1.1.1.2	2	2. Input Index	integer	RO
1.3.6.1.4.1.21796.4.9.1.1.2.1	0	1. Input Value, 0=Open, 1=Close	integer	RO
1.3.6.1.4.1.21796.4.9.1.1.2.2	0	2. Input Value, 0=Open, 1=Close	integer	RO
1.3.6.1.4.1.21796.4.9.1.1.3.1	Input 1	1. Input Name	string	RO
1.3.6.1.4.1.21796.4.9.1.1.3.2	Input 2	2. Input Name	string	RO
1.3.6.1.4.1.21796.4.9.1.1.4.1	0	1. Input State, 0=Normal, 1=Alarm	integer	RO
1.3.6.1.4.1.21796.4.9.1.1.4.2	0	2. Input State, 0=Normal, 1=Alarm	integer	RO
1.3.6.1.4.1.21796.4.9.70.1.0	00:0A:59:04:F8:8E	System MAC address	string	RO

### 3.11. TIME TAB

The system time and parameters of optional automatic synchronisation via time servers is sent in the Time tab.

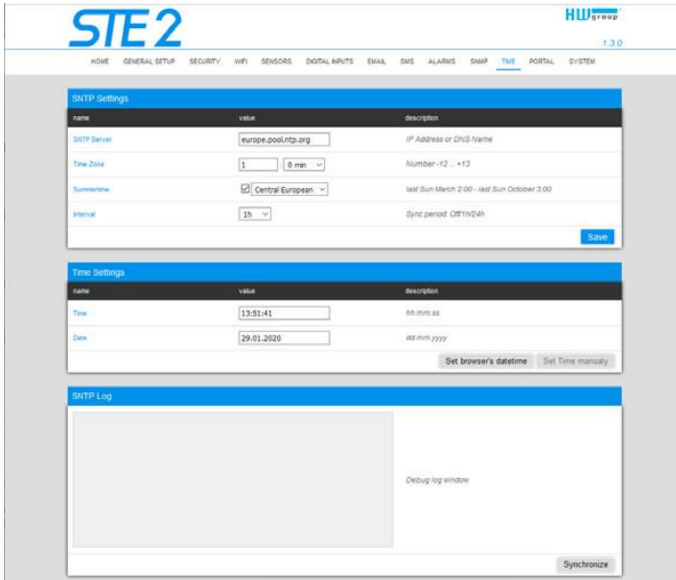

#### SNTP Settings

- **SNTP Server** – IP address or domain address of the time synchronisation server; default time.nist.gov.
- **Time Zone** – Setting of the time zone based on the device location. Serves to set the correct system time. Required for correct recording of measured values.
- **Summertime** – Enable summer time. Serves to set the correct system time. Required for correct recording of measured values.
- **Interval** – Interval of time synchronisation with the server.

#### Time Settings

The Time Setup section enables filling in the current date and time manually, if synchronization with the time server cannot be used.

#### SNTP Log

The Sync button serves to perform instant synchronisation with the time server. It can also be used to test settings.

## 3.12. PORTAL TAB

The tab serves to set parameters for sending data to a remote portal via HWg-PUSH protocol. More about the protocol or support of portal solutions is available on the website <http://www.HW-group.com>.

The screenshot shows the STE2 web interface with the following sections:

**Portal Message**

Portal\_Check\_sensor\_status\_0200-01-08 15:26:44 UTC

**Portal settings**

name	value	description
Portal	<input checked="" type="checkbox"/>	Portal Enable/Disable
Server Address	<input type="text" value="http://remote.hwgroup.cz/portal.php"/>	IP Address or DNS Name
IP Port	<input type="text" value="3080"/>	Default 80
Team	<input type="text" value="vitolmr"/>	Push device access parameters see at <a href="#">M2_ACCOUNT</a> on Sensdesk
Team Password	<input type="password" value="*****"/>	

**Portal Debug Log**

name	value	description
Push Period	900	[seconds]
Log Period	300	[seconds]
Current Push Timer	179	[seconds]
Current Log Timer	67	[seconds]
Current Check Timer	0	[seconds]
AutoPush Block Timer	0	[seconds]
Retransmit number	0	

### Portal Message section

Feedback from the portal containing e.g. links to graphs, etc. Depends on the portal type.

### Portal settings section

- **Portal** – Enables or disables this function.
- **Server address** – Complete URL of the remote server. Connection to the [www.SensDesk.com](http://www.SensDesk.com) is pre-set in the device.
- **IP Port** – Port which the portal tunes in to.
- **Team** – Name of the Team to which the device should be assigned.
- **Team Password** – Password of the Team to which the device should be assigned.

### **Input(s) AutoPush config section**

Sets the behaviour of AutoPush for DI inputs. During activation, the sending of information about changes in the input state to the portal is accelerated. The function can be enabled individually for each input.

### **Sensor(s) AutoPush config**

Sets the behaviour of the AutoPush function for individual sensors. The function accelerates the sending of information about fluctuating values to the portal. When the measured sensor value changes since last communication with the portal by more than the defined value, the device connects to the portal again and sends the new value.

### **Portal Debug Log section**

For debugging only. Event counters + Debug window for sending data to the portal.

- **Push Period** – Period of sending data to the remote portal. The period is determined by the portal and cannot be changed by the user.
- **Log Period** – Period of storing data for the portal in the cache. The period is determined by the portal and cannot be changed by the user.
- **Current Push Timer** – Timer indicating the time remaining until sending data to the portal.
- **Current Log Timer** – Timer indicating the time remaining until saving the data for the portal in the cache.
- **AutoPush Block Timer** – Time of incidents for AutoPush. If the permitted number of incidents for one Push period is exceeded, the AutoPush function will be blocked.
- **Retransmit number** – Counts the number of invalid Push attempts.
- **Manual Push** – Button for instant sending of data to the portal.

### **What is AutoPush**

• **AutoPush** – By default, the device thermometer sends data to the portal at a fixed interval defined by the relevant portal (in the case of the SensDesk portal, once every 15 minutes) and the user cannot change this value. A special case is the start and end of Alarms, when extraordinary sending will occur. AutoPush serves for the extraordinary sending of values also whenever the sensor value changes by more than the defined AutoPush value.

This concerns only the setting of communication between the device and the online portal. The values of local alarms are set in the portal.



### 3.13. SYSTEM TAB

The screenshot shows the STE2 web interface with the SYSTEM tab selected. The interface includes a navigation menu at the top, a Portal Message section, a Portal settings table, and a Portal Debug Log table.

**Portal Message**

Portal\_Check\_sensor\_online (2020-01-08 13:36:44 UTC)

**Portal settings**

name	value	description
Portal	<input checked="" type="checkbox"/>	Portal Enable/Disable
Server Address	<input type="text" value="http://remote.hwip.cz/portal.php"/>	IP Address or DNS Name
IP Port	<input type="text" value="3080"/>	Default 80
Team	<input type="text" value="votline"/>	Push device access parameters see at <a href="#">IP_account</a> on Senseless
Team Password	<input type="password" value="*****"/>	

**Portal Debug Log**

name	value	description
Push Period	900	(seconds)
Log Period	300	(seconds)
Current Push Timer	170	(seconds)
Current Log Timer	67	(seconds)
Current Check Timer	0	(seconds)
AutoPush Block Timer	0	(seconds)
Retransmit number	0	

#### Download section

- **Backup configuration** – Configuration backup in BIN format. Click on the link to save the current device configuration after its final settings for potential restore purposes.
- **Online setup in XML** – Configuration backup in XML format. Click on the link to save the current device configuration after its final settings for potential restore purposes.
- **Online values in XML** – Current values in XML format. Click on the link to save the current device configuration after its final settings for potential restore purposes.
- **SNMP MIB Table** – SNMP MIB file. MIB file address containing the definition of SNMP variables.
- **OID keys table** – The function will draw up the entire tree of variables with indication of the entire SNMP OID and explanations of the variable type.
- **TXT list of common SNMP OIDs** – Overview of most important OID from the MIB table.

## System section

- **Product Name** – Device name (type).
- **Serial Number** – Device serial number.
- **Eth MAC Address** – MAC address of device for cable connection.
- **WiFi STA MAC Address** – MAC address of device for WiFi connection.
- **Version** – Firmware version. Serves for diagnostic purposes when solving problems.
- **Build** – Serves for diagnostic purposes when solving problems.
- **Compile time** – Firmware compile time. Serves for diagnostic purposes when solving problems.
- **UpTime** – Runtime of the device since last switching on or restart. Serves for diagnostic purposes when solving problems.
- **Demo mode** – Active demo mode prevents any changes in your device configuration. In this mode, users can browse and view all the web interface pages, but they are not allowed to change any values. A device with this setting can be placed on the public internet with no risk of changes in its configuration.
- **Read available version** – Lists the latest version of firmware on the HW group update server.
- **Start Network Upgrade** – Launches a firmware upgrade from the HW group update server.
- **Upload Firmware or Configuration** – Install newer firmware or configuration files to the device.

Restore configuration may not work if there is too large a difference in firmware versions.

## Factory Default section

Restores factory settings. The default IP address is 192.168.10.20 and the username and password are not defined.

## System Restart section

Restarts the device.

### 4.1. TECHNICAL PARAMETERS

Ethernet	
Interface	RJ45 (10/100BASE-T)
Supported protocols	IP: ARP, TCP/IP (HTTP, HTTPS, SNMP, SMTP, HWg-Push, netGSM, TLS), UDP/IP (SNMP)
SNMP	Version 1 fully supported, some parts version 2

WiFi	
Supported standards	802.11 b/g/n
Frequency	2,4GHz
Output	<ul style="list-style-type: none"> <li>• 19.5 dBm output power in 802.11b mode</li> <li>• 16 dBm for 802.11n</li> </ul>
Security	WEP / WPA / WPA2 PSK / WPA2 TSK / WPS
Antenna	Internal

External sensors	
Port / connector	I1, I2 / $\varnothing$ 2 mm bracket
Connectability	Three external temperature or humidity sensors. One combined temperature + humidity sensor can be connected.
Sensor type	Only sensors from HW group s.r.o.
Sensors / distance	Max 3 sensors / Max 60 metres total length

DI INPUTS (Dry Contact Inputs)	
Port / connector	Port1, Port2 / RJ11 (1-Wire)
Type	Digital Input (supports NO/NC Dry contact)
Sensitivity	1 (On) = 0-500 Ohm (Right pin on the terminal block can be connected to 12V GND)
Max. distance	Up to 50m





Power supply	
Power voltage	5V / 250 mA
Connector	Jack $\varnothing$ 3.5 x 1.35 / 10 [mm]
PoE (Power over Ethernet)	RJ45 - IEEE 802.3af Class 0

LED	
LINK	Green – Ethernet connection state
Activity	Yellow – Ethernet activity
Alarm	Port 1 – Alarm SENS – Shines if alarm active on sensor Port 2 – Alarm DI – Shines if alarm active on sensor
IN	Yellow – activation of the contact
WiFi	Blue – connection state in operation (shining), search indicator (flashing slowly) and connection (flashing quickly)

Button	
Reset	Restore default settings: hold or 5 seconds after connecting power supply.

Other parameters	
Operating temperature	-10 to 60 °C (range of device operating temperatures – may not correspond to sensor range)
Dimensions/weight	65 x 80 x 30 [mm] / 500 g
Elmag. radiation	CE / FCC Part 15, Class B
Elmag. compatibility	EN 55022, EN 55024, EN 61000

## 4.2. PHYSICAL DIMENSIONS

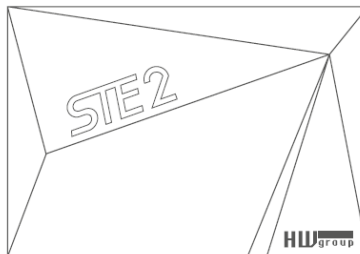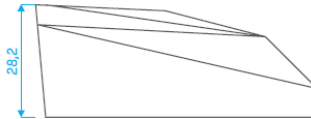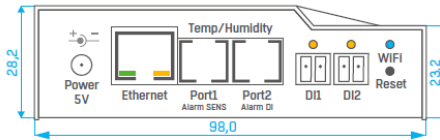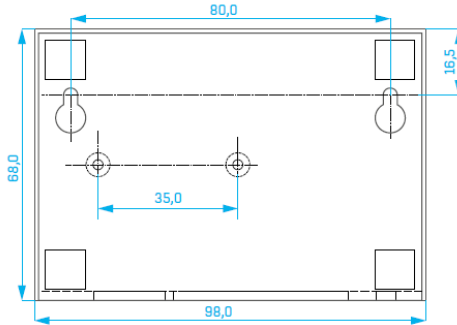

### 4.3. WIFI RADIO

Description	Min	Typical	Max	Unit
Input frequency	2412	-	2484	MHz
<b>Tx Power</b>				
Output power of PA for 72.2 Mbps	13	14	15	dBm
Output power of PA for 11b mode	19.5	20	20.5	dBm
<b>Sensitivity</b>				
DSSS, 1 Mbps		-98		dBm
CCK, 11 Mbps		-91		dBm
OFDM, 6 Mbps	-	-93	-	dBm
OFDM, 54 Mbps	-	-75	-	dBm
HT20, MCS0	-	-93	-	dBm
HT20, MCS7	-	-73	-	dBm
HT40, MCS0	-	-90	-	dBm
HT40, MCS7	-	-73	-	dBm
MCS32	-	-90	-	dBm
<b>Adjacent Channel Rejection</b>				
OFDM, 6Mbps		37		dB
OFDM, 54Mbps		21		dB
HT20, MCS0		37		dB
HT20, MCS7		20		dB

### 4.4. WIFI SIGNAL STRENGTH

What is signals strength

WiFi is a radio signal and it has limitations in reach given firstly by the transmission output and by the quality and shape of the antennas. Signal strength is indicated in decibels per milliwatt of output (dBm), often (incorrectly) simplified to “dB”. Signal strength has a negative value and it applies that the lower the value (a higher number after the negative sign), the worse.


The decibel unit is non-dimensional and expresses the logarithm of a ratio of two values. In our case, it is the ratio of received output to an etalon of 1 mW:

$$dBm = 10 \cdot \log_{10} \frac{P_1}{1mW}$$

*This means that if you have a signal of -54 dBm, it is higher (better) than a value of -82 dBm.*

## 4.5. IMPACT OF DEVICE POSITION VIS-A-VIS THE TRANSMITTER (ROUTER OR AP)

The device uses a flat antenna similar to mobile telephones or laptops, while the connection points generally use multi-directional antennas (rods). Flat antennas have the same or better sensitivity as multi-directional antennas (the transition connector is omitted), but its primary disadvantages include sensitivity to the positioning of the device vis-à-vis the connection point.

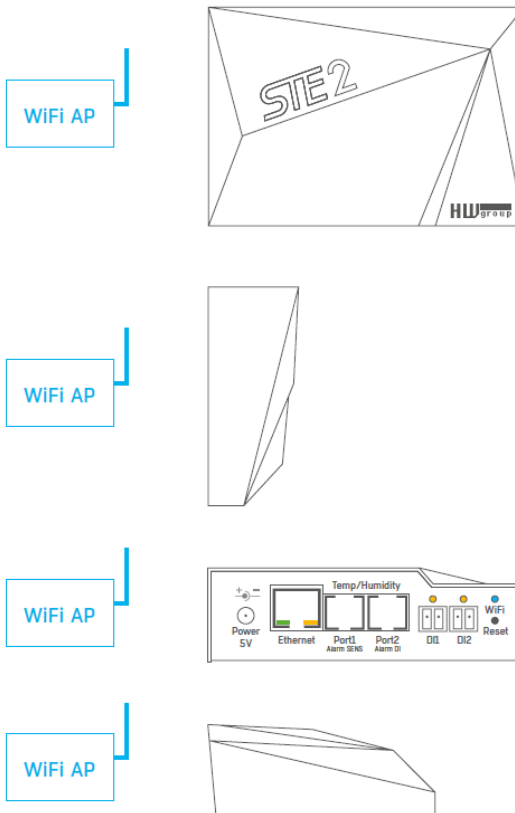

## 5.1. DRY CONTACT INPUTS

Dry contacts can be connected to the brackets.

For instance door contacts.

The inputs are galvanically connected to the power supply.



- **Unconnected input** has a value of „0 (Off)“.
- **Active input** is identified as „1 (On)“, Ohmic resistance of the input against the Common bracket must range between 0  $\Omega$  and 500  $\Omega$ .

### Connection parameters:

- **Maximum cable length:** 50 metres.
- **Supported sensors:** Any dry contact.
- **Alarm setting for each DI input**
  - Alarm inactive.
  - Alarm state when the contact is activated or deactivated.
  - Alarm state when the contact is deactivated.
- **Options for reacting to Alarm state:** Common settings for all inputs.
  - No reaction.
  - Notify of Alarm by sending e-mail or SMS.
- **Reading period:** 800 ms.
- **Range of ID sensors:** Inputs use address ID in the range of 1 to 9.
- **Sensor name:** The sensor can be named independently with up to 12 characters.
- **Sensor disconnection detection:** No, the disconnected sensor returns to the value „0 (Off)“.

## 5.2. RJ11 – 1-WIRE BUS

Digital bus by Dallas Semiconductor, each sensor has a unique ID.

We recommend lines up to a total length of 60 m. There are known cases of experimentation with bus function up to a distance of tens to hundreds of metres.




Flawless functioning cannot be guarantee for cables lines than 60 m from one connector on the device. It depends on the make of the cable, topology of the line and environment where the line is installed.

### 5.3. ACTIVE / PASSIVE 1-WIRE PORT

• **Active port:** RJ11 connector on the device. It guarantees full maximum distance of the sensors and power supply for all sensors.

When you reconnected the connected sensor from one active port to another, the sensor shows up as disconnected. You must restart automatic sensor detection.

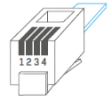


• **Passive port:** RJ11 connector on the T-Hub router or RJ11 connector from the sensor (if sensors are chained).

RJ11		
1	-	Not used
2	Data	Transmit Data
3	GND	Ground
4	+5V	Power

### 5.4. SENSOR HYSTERESIS

The Hysteresis value defines the width of the tolerance range for sending an alarm. The function prevents the occurrence of multiple alarms in cases when the value oscillates around the defined value. The function is apparent from the graph.

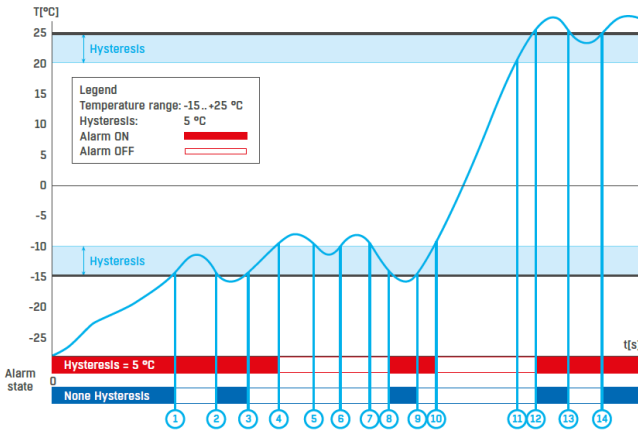

Within the internal 5°C hysteresis band, the alarm would be activated in **point 8** and would end in **point 9**. Because of the hysteresis function, the alarm is extended until the temperature reaches the end of the hysteresis zone (point 10) 5 °C + (-15 °C) = -10 °C.

- **Hysteresis (=5 °C):** The unit sends 3 e-mails (SMS)  
 Alarm at points 0..4, 8..10, 12 and upwards.
- **Without hysteresis (0 °C):** The unit sends 8 e-mails (SMS)  
 Alarm at points 0..1, 2..3, 8..9, 12..13, 14 and upwards.



## 6. CONNECTION STE2 TO THE SENSDESK PORTAL

1. Connect the device to the computer network and set the network parameters (see the First Steps chapter).

HWg-Config 1.1.1 for HW group products (www.hw-group.com)

Version: 1.1.1  
HW group s.r.o.  
www.hw-group.com  
Config utility for the HW group devices

Your PC network settings:  
IP address: 192.168.200.4  
Netmask: 255.255.252.0  
Gateway: 192.168.200.1

Device list:

MAC	Name	IP	Device type	Port	Parameters
00:0A:59:04:31:BF	STE2	192.168.100.41	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:31:69	STE2	192.168.100.51	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:33:63	STE2	192.168.100.79	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:3A:15	STE2	192.168.100.123	STE2 - Eth	80	TCP setup=N, DHCP=N
00:0A:59:04:33:90	STE2	192.168.200.2	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:35:2C	STE2	192.168.200.5	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:35:29	STE2	192.168.200.6	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:35:23	STE2	192.168.200.7	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:35:29	STE2	192.168.200.8	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:35:1A	STE2	192.168.200.9	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:35:14	STE2	192.168.200.10	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:35:05	STE2	192.168.200.11	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:35:38	STE2	192.168.200.12	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:35:32	STE2	192.168.200.13	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:33:0C	STE2	192.168.200.14	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:32:F4	STE2	192.168.200.15	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:33:09	STE2	192.168.200.16	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:32:EE	STE2	192.168.200.17	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:33:A6	STE2	192.168.200.18	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:31:ED	STE2	192.168.200.20	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:34:E4	STE2	192.168.200.21	STE2 - Eth	80	TCP setup=N, DHCP=Y
00:0A:59:04:34:D8	STE2	192.168.200.22	STE2 - Eth	80	TCP setup=N, DHCP=Y

Searching modules... 233 device(s) found on network, 130 device(s) filtered and displayed Filter: STE2 - Eth

2. Check the device website:

STE2

HW group f.3.0

HOME GENERAL SETUP SECURITY WIFI SENSORS DIGITAL INPUTS EMAIL SMS ALARMS SNMP TIME PORTAL SYSTEM


Basic Info


Device Name	Week Stul
Time	16:17:17
Date	08 01 2020

Sensors & Digital Inputs


state	name	type	current value
Normal	Sensor 2553	Humidity	41.8 %RH
Normal	Sensor 3553	Temp	27.8 °C
Invalid	Sensor 6291	Temp	999.9 °C
Invalid	Sensor 6292	Humidity	999.9 %RH
Normal	Input 1	Input Dry Contact	0 (Open)
Alarm	Input 2	Input Dry Contact	1 (Closed)

3. Tick the Enable Portal option and save the changes using the Save button in the bottom Right corner of the window. Then click the Manual Push button in order to activate the portal function. Instead of "Portal disabled", a link SensDesk.com: register your IP sensor should appear in the Portal Message field. Click this link in order to get to the SensDesk.com portal.

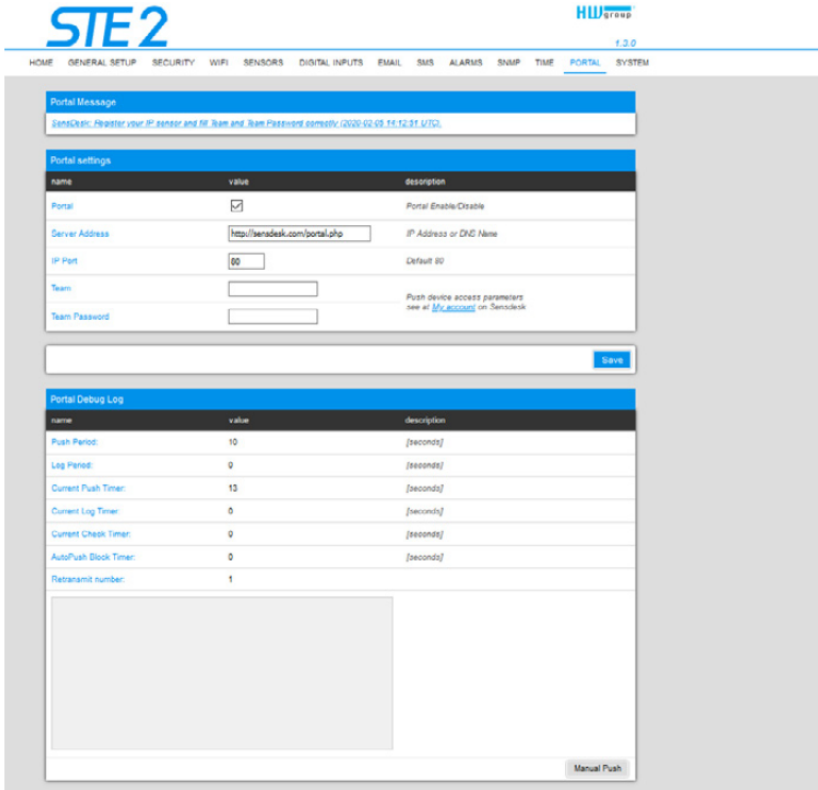


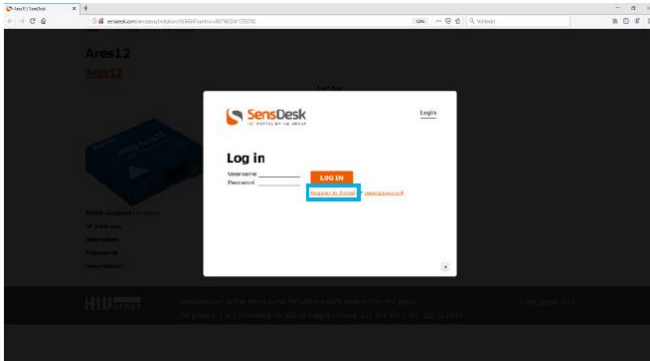


4. In case you already have a user account, please enter your login details and the device will be automatically assigned to your account. If you do not have a SensDesk account yet, click the Register and a registration form will be shown.

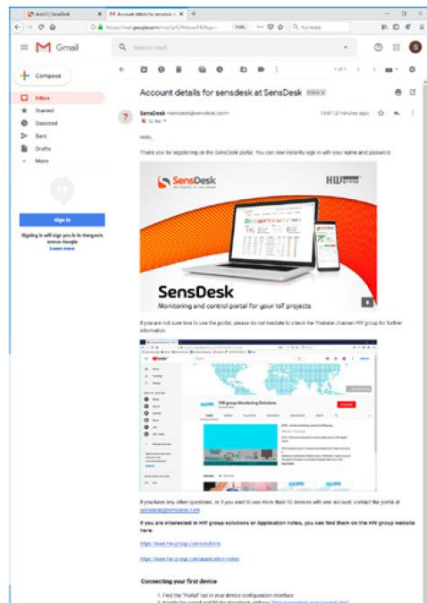


5. Enter the login details for your new account and a correct e-mail address. This e-mail address has to be unique for the server (cannot be already registered by another user).

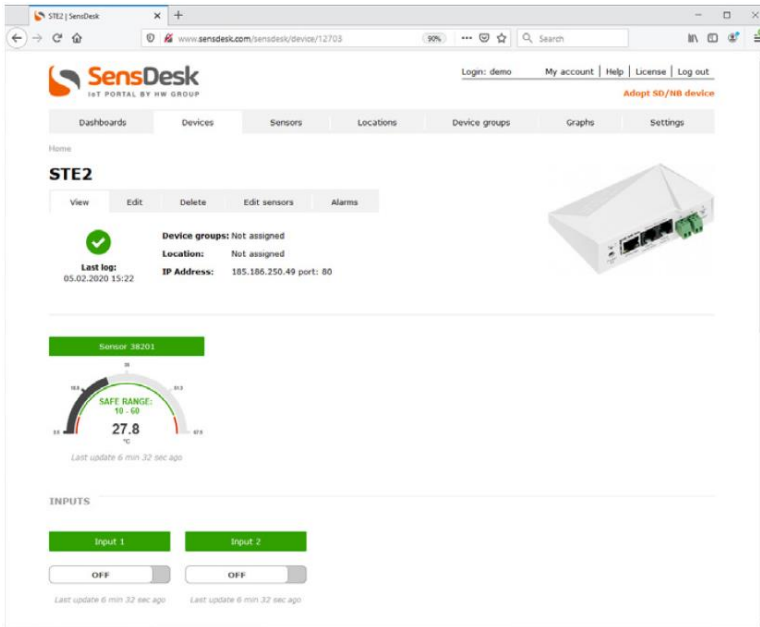

- By activating the account, you will be redirected to the Devices > View page. At this moment, the data-sending period is set to 10 seconds to show the sensors functionality. This page is active only for approximately 15 minutes after the activation, then the logging period changes to 15 minutes.

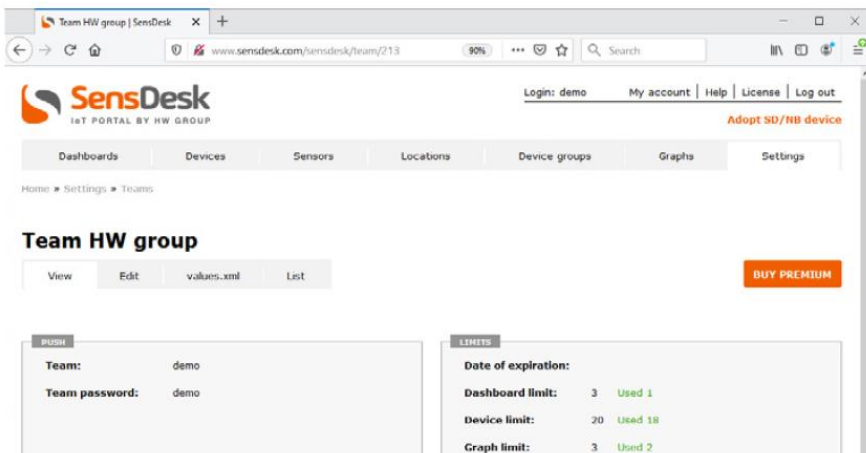

7. If you check Teams link, you will find your Team Password. This password, together with your login name, identifies the device in communication with your account and in communication of mobile applications with SensDesk. The password cannot be changed and for a security reason it is different to the login password.

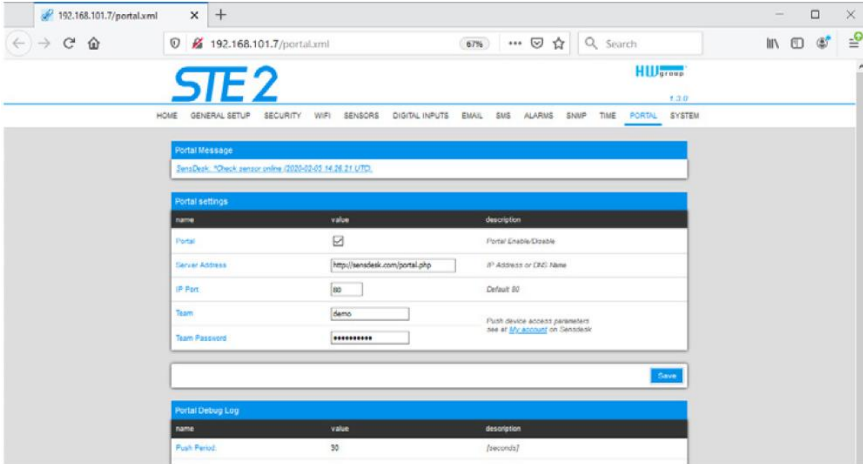

8. Team Password can be used in devices to skip the logging procedure during assigning the device to your portal account, or in mobile applications:


The screenshot shows the SensDesk Mobile app interface. At the top, there is a status bar with the time 11:33 and battery level 69%. Below the status bar, there is a header with 'SensDesk Mobile' and a refresh icon. The main content is a table with columns for device name, status, and description. The table is sorted by 'DEVICES'. The table has a header row with 'ALL' and 'ALARMS' tabs. The data rows are as follows:

Sort by DEVICES		
ALL	ALARMS	
Ares12 Online Prague	100 %	Battery Monitor
Ares12 Online Prague	83 %	Bright in box
Ares12 Online Prague	1	External Power
Ares12 Online Prague	55 Pulses	External Power (Counter)
Ares12 Online Prague	0	Input 1
Ares12 Online Prague	5 Pulses	Input 1 (Counter)
Ares12 Online Prague	0	Input 2
Ares12 Online Prague	1 Pulses	Input 2 (Counter)
Ares12 Online Prague	31.2 %RH	Outdoor RH
Ares12 Online Prague	16.087 °C	Outdoor Temp.

Portal function periodically sends the data to a remote server and the sending period is set by this server. AutoPush is a function allowing unusual measured data sending, beside the periodical logging, in case that the value change is higher than the AutoPush delta parameter.

## 7. USING THE MOBILE PHONE APP

The **Username** and **PUSH Device** password can also be used in the application settings on mobile phones.

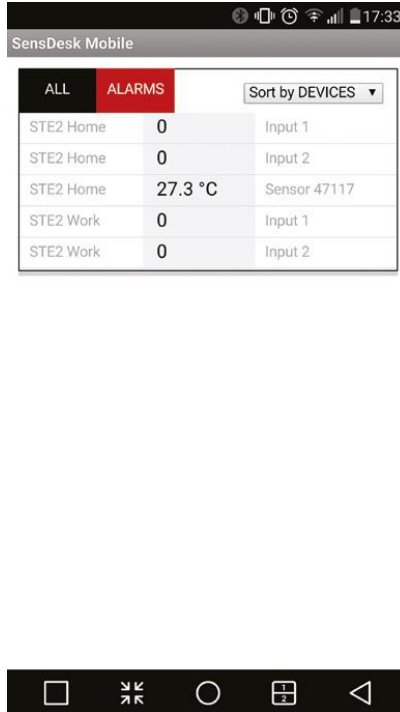

1. Open the device web interface in the System tab.



2. The System section contains items to identify and download the current FW version.



3. Read available version – Serves to identify and display the current firmware version on the update server. Click on the Read available version link.

System	
name	value
Product Name:	STE2 Rev2
Serial Number:	6006990035
Eth MAC Address:	00:0A:59:04:F8:2B
Wifi STA MAC Address:	00:0A:59:04:F8:2D
Version:	1.3.0
Build:	349
Compile time:	Nov 27 2019, 21:28:46
Up Time:	224/3 [s]
Demo Mode:	<a href="#">Demo Mode</a>
Network Upgrade	<a href="#">Read available version</a> --- <a href="#">Start Network Upgrade</a> ---
Upload Firmware or Configuration:	<input type="button" value="Browse..."/> No file selected. <input type="button" value="Upload"/> <input type="text"/>

4. Start Network Upgrade – Serves to upgrade firmware to the device. The download progress is displayed while upgrading. Click on the Start Network Upgrade link.

System	
name	value
Product Name:	STE2 Rev2
Serial Number:	6006990035
Eth MAC Address:	00:0A:59:04:F8:2B
Wifi STA MAC Address:	00:0A:59:04:F8:2D
Version:	1.3.0
Build:	349
Compile time:	Nov 27 2019, 21:28:46
Up Time:	224/3 [s]
Demo Mode:	<a href="#">Demo Mode</a>
Network Upgrade	<a href="#">Read available version</a> --- <a href="#">Start Network Upgrade</a> ---
Upload Firmware or Configuration:	<input type="button" value="Browse..."/> No file selected. <input type="button" value="Upload"/> <input type="text"/>



5. After the upgrade, the user is requested to restart the device manually.

System	
name	value
Product Name:	STE2 Rev2
Serial Number:	6006990035
Eth MAC Address:	00:0A:59:04:F8:2B
Wifi STA MAC Address:	00:0A:59:04:F8:2D
Version:	1.3.0
Build:	349
Compile time:	Nov 27 2019, 21:28:46
Up Time:	224/3 [s]
Demo Mode:	<a href="#">Demo Mode</a>
Network Upgrade	<a href="#">Read available version</a> ---
	Start Network Upgrade:---
Upload Firmware or Configuration:	<input type="button" value="Browse..."/> No file selected. <input type="button" value="Upload"/> <input type="text"/>

6. To do this, press the Restart button. The device will not restart automatically and this must be done manually.

Check the firmware version after restart.

System	
name	value
Product Name:	STE2 Rev2
Serial Number:	6006990035
Eth MAC Address:	00:0A:59:04:F8:2B
Wifi STA MAC Address:	00:0A:59:04:F8:2D
Version:	1.3.0
Build:	349
Compile time:	Nov 27 2019, 21:28:46
Up Time:	224/3 [s]
Demo Mode:	<a href="#">Demo Mode</a>
Network Upgrade	<a href="#">Read available version</a> ---
	Start Network Upgrade:---
Upload Firmware or Configuration:	<input type="button" value="Browse..."/> No file selected. <input type="button" value="Upload"/> <input type="text"/>



**GORGY TIMING SAS**

Quartier Beauregard

**38350 La Mure d'Isère** (Grenoble France)

Phone: **+33 4 76 30 48 20** Fax: **+33 4 76 30 85 33**

email: [gorgy@gorgy-timing.fr](mailto:gorgy@gorgy-timing.fr) - [www.gorgy-timing.com](http://www.gorgy-timing.com)

**TECHNICAL SUPPORT**

 **N°Audlotel 0 892 68 70 68**

FROM FRANCE ON A FIXED LINE: **0,34€ TTC / MN**

[support@gorgy-timing.fr](mailto:support@gorgy-timing.fr)

RADIO TIMING®, LEDI®, LEDICA®, HANDI® are registered trademarks GORGY TIMING.

Training provider's activity declaration number : 82 38 04877 38

GORGY TIMING RC 74 B 38 - Any changes of a technical or aesthetic nature may be made without prior notice.